

直流無刷吹風機(家庭用) DC Motor Hair Dryer

使用說明書 Instruction Manual



Model: TM-SAD06A

Read this booklet thoroughly before using and save it for future reference



廢電池、紙類
塑膠類請回收

V 1.0
106

目錄

1.免責聲明	-----1	7.自動清潔使用說明	-----5
2.緊急處理方法&警告	-----1	8.故障識別說明	-----5
3.安全注意事項	-----2	9.故障排除	-----6
4.產品特點	-----3	10.清潔及保養方法	-----6
5.各部位名稱	-----3	11.產品規格	-----6
6.使用說明	-----4	12.限用物質含有情況標示	-----6

免責聲明

本手冊經仔細檢查及校對，但仍不排除文字拼寫及技術錯誤之可能，若因錯誤導致與實機不符時，以實機為準，此種錯誤或疏漏不能當呈堂的依據，其將於新版予以修正。

本手冊之全部內容，本公司享有隨時修改之權力，且不另行通知。

緊急處理方法&警告

當發生異常或有燒焦味時，應立即停止使用，並與本公司服務專線聯絡或就近經銷商洽詢，若在異常狀態下繼續使用易發生火災之危險。

為了避免火災或是電擊的危險，請勿讓本機暴露於雨中或濕氣中。

電源請確實插牢於電源插座內，以免因未插牢而引起插頭產生高熱，而造成意外。

電源線或電源底座若損壞時，請速與本公司服務專線聯絡或就近經銷商洽詢。

安全注意事項

在使用本機之前，應仔細閱讀下列事項及說明，閱後並請妥為收存，以備將來參考：

- ◎不要在手上有水的情況下、潮濕境以及潮濕的表面上使用本產品，不要將本產品浸泡在水或其他液體中。
- ◎勿在浴缸、淋浴設備、洗臉台或其他盛水容器附近使用本電器。
- ◎為達到額外保護之目的，建議在浴室之供電電路上安裝殘餘動作電流不超過30mA之漏電斷路器(RCD)，可諮詢安裝人員
- ◎當本產品處於關閉狀態時請撥掉本產品的插頭，因為靠近水會產生危險
- ◎不要在本產品接觸液體、電損壞、其主體或/且配件出現明顯的損壞時使用。如果本產品不能正常使用，立刻拔掉電源並將其送往售後服務據點檢測/維修。如果電線損壞，為避免危險應當由製造商、專業維修中心或銷售點進行更換。
- ◎將本產品及其電線放置在遠熱源和熱敏表面等等。
- ◎不要通過拉扯電源線的方式拿起或拿著本產品；使用後，在本產品未冷卻前，不要將電線纏在產品上不要通過拉扯電的方式拿者或操作本產品。不要將其彎曲或反復折以防止影響其正常功能並因此損壞本產品。不按照上述警告和說明進行操作可能會導致短路因而本產品產生不可修復的故障，也會威使用者的安全。
- ◎如果電線出了任何破壞或磨的跡象，應當且只能由專業人員進行更換。
- ◎不使用本產品的情況下，請拔掉插頭，並在存放在安全場所前進行冷卻。通過拔掉牆上電源插座的插頭以切斷電源。
- ◎清理本產品首先需要保持與電源插座斷開並使其完全冷卻。當清潔時，不要使用有機溶劑的侵蝕性產品。
- ◎孩童應受監護，以確保孩童不嬉玩電器。
- ◎本電器不預期供生理、感知、心智慧力、經驗或知識不足之使用者（包含孩童）使用，除非在對其負有安全責任的人員之監護或指導下安全使用。

產品特點

- 一分鐘11.3萬轉高轉速，三分鐘快乾
- 具負離子功能，可令秀髮更加柔順有光澤
- 自動清潔功能，輕鬆去除機上殘留的毛髮
- 三段風速，三種溫度，自由調整
- 冷風鍵設計，可快速定型
- 輕量美型，方便攜帶
- 多樣配件：小吹嘴、大吹嘴、造型烘罩，輕鬆打造各種髮型

各部位名稱



配件: 小吹嘴x1、大吹嘴x1、造型烘罩x1、說明書(含保證書)x1

使用說明

1. 在連接本產品到主電路時確保你的手是完全乾燥的。
2. 連接吹風機的電源並將電源開關從0至1。(如圖1)
3. 調節風溫以完美滿足你的需求。
4. 吹風機設有風速調節按鈕,按下上端風速會增加,同時白色LED燈會亮起,按下調節按鈕的下端可以降低風速。(如圖2)



(圖1)



按下上端風速會增加,
同時白色LED燈會亮起



白色LED燈全亮起
最大風速



按下下端風速會降低,
同時白色LED燈會熄滅

(圖2)

5. 吹風機設有風溫調節按鈕,通過按下其上端風溫會增加同時紅色LED燈亮起,可以通過按下按鈕的下端降低風溫。(如圖3)



按下上端風溫會增加,
同時紅色LED燈會亮起



紅色LED燈全亮起
最大風溫



按下下端風溫會降低,
同時紅色LED燈會熄滅

(圖3)

6. 在長時間吹頭髮的時候你可以使用“冷風”按鍵,當“冷風”模式啟動後,風溫指示LED燈會熄滅。關掉後,溫度將會返回之前的設定。(冷風模式取消)(如圖4)



(圖4)

冷風模式啟動後,風溫
指示LED燈會快速閃爍

自動清潔使用說明

本吹風機具有清潔內部構件的清潔功能的特色。


打開自動清潔功能的方式

當吹風機處於關閉狀態時,小心地逆時針旋轉外部的過濾網並將其向外放置。

然後按下在備的靠下部分的按鈕來選擇風速,並且持續按住5秒。(如圖5)

電機將會反向轉動15秒同時其他按鈕都處於失能狀態。

在自動清潔的最後,將外部的過濾網放回原處並打開吹風機。如果你想停止自動清潔,打開吹風機,將電源開關由0調至1。本功能會自動停止,吹風機會正常工作。

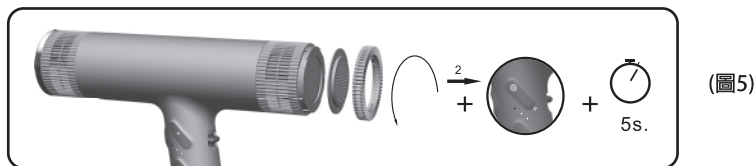

故障識別說明

本吹風機具有故障識別的特色。如果這項功能檢測到問題,本產品不會打開或者會停止工作。LED燈將會顯示如下的信號:

故障	LED燈1	LED燈2	LED燈3	LED燈4	LED燈5	LED燈6
過流硬件保護	閃爍	關閉	關閉	關閉	關閉	關閉
溫度傳感器超出檢測範圍	關閉	閃爍	關閉	關閉	關閉	關閉
軟件保護	閃爍	閃爍	關閉	關閉	關閉	關閉
電壓超過上限	閃爍	閃爍	閃爍	關閉	關閉	關閉
電壓低於下限	閃爍	閃爍	閃爍	閃爍	關閉	關閉
電機堵轉	閃爍	閃爍	閃爍	閃爍	閃爍	關閉
缺相	閃爍	閃爍	閃爍	閃爍	閃爍	閃爍

故障排除

故障現象	故障原因	解決方法
過流硬體保護	功率模組損壞或採樣電阻貼錯	送回售後服務據點檢測維修
溫度感測器超出檢測範圍	NTC接觸不良、斷線或損壞造成短路，	送回售後服務據點檢測維修
軟體保護	線路板短路	送回售後服務據點檢測維修
電壓超過上限	電源電壓過高	送回售後服務據點檢測
電壓低於下限	電源電壓過低	送回售後服務據點檢測
電機堵轉	電機扇葉被異物卡住	送回售後服務據點檢測維修
缺項	電機燒壞，更換電機	送回售後服務據點維修

清潔及保養方法

- 1.在清潔某一部件前,從電源插座上將它拔下來並等待至其完全冷卻。
- 2.定期清理部件中的灰塵和頭髮。
- 3打開後面的過濾網,拿著吹風機進行操作,逆時針打開後蓋。
- 4.拿出內部的過濾網用布或者流動的水接清潔它在放回前確保過濾網已經完全乾燥用布或濕海綿清潔吹風機的主體,在使用本產品前確保其已經完全乾燥一個保存和・狀況良好的吹風機比起一個沒有維護的吹風機具有更長的使用壽命。

產品規格

額定電壓/頻率:110V~/60Hz

產品尺寸:223x46x195mm

商品原產地:中國

總額定消耗電功率:1200W

產品重量:約430g

限用物質含有情況標示

揭露網址:<http://59.124.114.85/download/ROHS/A0127.pdf>

Attention

Warning: Please read carefully before using the product. Keep the instruction properly.

1-Please don't use the product if your hands are wet or in damp environment and surface. Please don't soak the product into water or other liquid.

2-Please don't use the product beside the bathtub or other vessels retaining water.

3-When the product is in a closed state, please pull out the plug. Due to its very dangerous close to the water. So please be careful if using it in the bathroom.

4-Do not use the product in this situation: the product touches water, the wiring is damaged, the main body or/and accessories are visibly damaged. If the product does not work properly, unplug it immediately and send it to a licensed maintenance center.

5-If the wiring is damaged, to avoid danger, it should be changed by the manufacturer, professional maintenance center or point of sale.

6-Please place the product and its wiring away from the heat source and heat sensitive surface.

7-Do not pick up or hold the product by pulling the power line; After using, do not wind the wire around the product before it is cooled.

Do not hold or operate the product by pulling the wire. Do not bend or bend it repeatedly to prevent it from affecting its normal function and thus damaging the product. Failure to follow the above warnings and instructions may result in a short circuit, resulting in an irreparable failure of the product and a threat to the safety of the user.

8-If the wire is damaged or abraded, it should be changed by professionals. Don't use the equipment and accessories that are modified or not purchased from the manufacturer.

9-If don't use the product, please unplug it and cool it before placing it in a safe location. Pull out the power plug on the wall to cut off the power supply.

Attention

10-Before cleaning the product, please ensure it has been disconnected from power plug and has cooled fully. When cleaning the product, please avoid using the corrosive products containing phenylphenol.

11-For enhancing safety, it's suggested to install a residual current device with a rated residual operating current not exceeding 30mA in the power supply circuit of the bathroom. Consult from your installer. The children should be supervised constantly, and ensure they don't treat the product as a toy to play.


This product possesses double insulated system to ensure your safety. The mark on the product or package indicates that the product cannot be regarded as ordinary household waste; If you decide to discard it, you should send it to a suitable recovery point for recycling power electronics. When you dispose of the product correctly, you are helping to eliminate potential negative environmental and health impacts.



Feature

- Rotational speed 113,000 rpm.
- Three-stage wind speed and three kinds of temperature can adjustment.
- Release negative ion.
- Automatic cleaning function.
- Three kind of accessories : Two wind collecting nozzles and one wind dispersing nozzle.

Structure

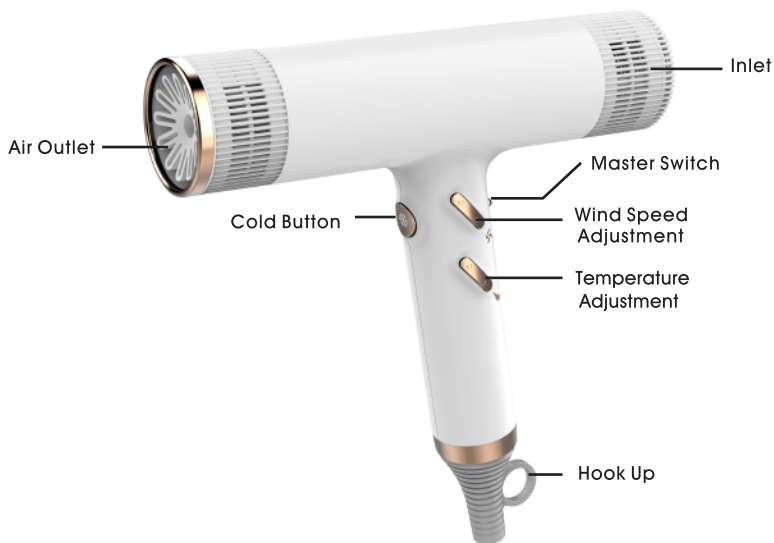

Product attribute

Rated voltage:110V~/60Hz

Rated power:1200W

Product Size:223x46x195mm

Net weight:430g

Instruction For Use

1-Ensure your hands are dry when you are connecting the product to the main circuit.

2- Connect the power supply of the hair dryer and adjust the power switch from 0 to 1.



Wind Speed

The hair dryer is equipped with a button to adjust the wind speed. Press the upper part of the adjustment button, the wind speed will be increased and the white LED will light up. While press the lower part of the adjustment button, the wind speed will be decreased.



Temperature Gear Setting

The hair dryer is equipped with 3 temperature levels which can be adjusted with the corresponding buttons.

Press the upper part of the button, the temperature will be increased and the red LED will light up. Press the lower part of the button, the temperature will be decreased.



Cold Wind

You can use the "cold wind" when blowing your hair for a long time. When the "cold wind" mode is started, the temperature LED light will flash quickly. When it's ended, the temperature will return to the original setting. (The cold wind mode is canceled)




Automatic Cleaning Function

The hair dryer features the cleaning function of cleaning the internal structures.

The way of turning on the automatic cleaning function:

When the hair dryer is turned off, carefully rotate the external filter counterclockwise and place it outward. Then press the button on the upper part of the device to select the wind speed, and continue to hold for 5 seconds.

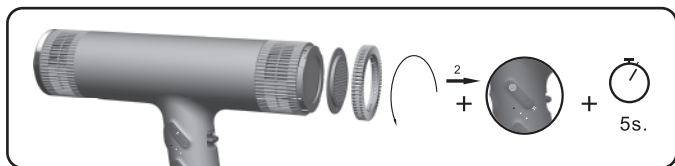

The motor will rotate in reverse for 15 seconds while the other buttons are incapacitated. At the end of the self-cleaning, rotate the external filter back to its original position, then turn on the hair dryer. If you want to stop auto-cleaning, turn on the hair dryer and set the power switch from 0 to 1. This function will stop automatically and the hair dryer will work normally.

Fault identification Self diagnosis

The hair dryer features as the function of fault identification.

Fault	LEDlight1	LEDlight2	LEDlight3	LEDlight4	LEDlight5	LEDlight6
Over current hardware protection	Flash	Close	Close	Close	Close	Close
The temperature sensor is beyond the detection range	Close	Flash	Close	Close	Close	Close
Software protection	Flash	Flash	Close	Close	Close	Close
Voltage exceeds upper limit	Flash	Flash	Flash	Close	Close	Close
Voltage is below the lower limit	Flash	Flash	Flash	Flash	Close	Close
Motor stalling	Flash	Flash	Flash	Flash	Flash	Close
Default phase	Flash	Flash	Flash	Flash	Flash	Flash

Cleaning and maintenance

- This product features as innovative system to prevent hair from getting involved into the motor.
- Keeping good maintenance on your appliance could ensure the optimal performance and extend the product life.
- Before cleaning one of the parts, unplug it from the power plug and wait until it cooling fully.
- Clean dust and hair in components regularly.
- Open the filter screen at the back, hold the hair dryer, and open the back cover counterclockwise. Take out the internal filter screen.
- Clean it with a cloth or running water. Ensure the filter screen is dry completely before placing it.
- Clean the main body of the dryer with a cloth or wet sponge.
- Before using it, please ensure it is dry completely.
- One dryer that is kept and maintained well has a longer working life than that without good maintenance.

THOMSON is a trademark of Technicolor SA used under license by IFI HK. Ltd

ENVIRONMENT-FRIENDLY DISPOSAL 廢電池請回收



You can help protect the environment!

Please remember to respect the local regulations:

Hand in the non-working electrical equipments to an appropriate waste disposal centre.

廢電池未妥善回收處理可能造成環境衝擊及人體危害：

電池棄置時應交至電池回收中心處理

請勿隨意丟棄

非常感謝您：

承蒙惠購本產品，本公司除表達最高謝意外，並將本著一貫的服務精神，隨時為您提供最佳服務，在您使用前務請詳閱本說明書，並依正確方法使用，閱讀完畢後請妥為保管，以備日後使用參考。

商品保證書

機型：TM-SAD06A

購買日期： 年 月 日

顧客	姓名	電話:
	地址	
經銷商		

- 一. 上列保證書應確實填寫，並蓋有經銷商店章始為有效。
- 二. 免費服務年限為一年，自購買日起一年內，在正常使用下，如發生故障，則免費維修，但人為或天災地變或蟲害，不在此限。(如需服務換修零件，則按本公司服務規定，收取維修費)。
- 三. 收費服務年限為兩年，收費服務兩年內，如需維修則按本公司服務規定，收取維修費。
- 四. 免費再延長6個月保固：請即刻上本公司網站：<http://wonder.tw> 登錄購買的產品。
網路登錄產品註冊【需先加入旺德會員】，註冊成功該產品既享有延長保固6個月時間。
本公司網站另有多項優惠與服務，敬請多加利用。
- 五. 自然耗材不在保固範圍內(例：電池、充電電池、天線、磁頭、雷射頭、耳機、遙控器、信號線、燈泡、刀具組、濾網、線材與隨機附贈之軟體及其他配件…)等。
- 六. 本保證書遺失恕不補發，但如需服務，則依出廠日期，計算保證年度。
- 七. 本商品無外修服務，如有另行約定則外出檢修費，依本公司規定收取；若發生故障請送回原購買經銷商或親洽本公司所屬營業所。
- 八. 本商品維修範圍僅於“台、澎、金、馬”(需付擔一趟郵資)，其餘地區請自付來回郵資。
- 九. MP3、音響…等產品送修時，內存的資料(數位、類比)有可能流失，建議送修前請先行備份，若有資料遺失之情形，本公司將不負任何賠償責任，郵寄維修視同同意本條款。
- 十. 本商品使用於營利商業用時，其保證期限按保證書所載期限減半保固。

宣告：

說明書業經仔細檢查及檢對，但仍不排除文字拼寫及技術錯誤之可能，此種錯誤或疏漏將於新版予以修正。本手冊之全部內容，本公司享有隨時修改之權利，且不另行通知。

消費者專線及售後服務據點

台北 (02)8990-4440 新北市五股區五工三路116巷6號
台中 (04)2479-0960 台中市南屯區黎明路一段533號
高雄 (07)371-4688 高雄市仁武區仁雄路96號

委製/進口商

旺德電通股份有限公司

新北市五股區五工三路116巷6號
服務專線:(02)8990-4440
<http://wonder.tw>
E-mail:service1@wonder.tw