

非常感謝您：

承蒙惠購本產品，本公司除表達最高謝意外，並將本著一貫的服務精神，隨時為你提供最佳服務，在你使用前務請詳閱本說明書，並依正確方法使用，閱讀完畢後請妥為保管，以備日後使用參考。

THOMSON

●● 產品保證書 ●●

機型：TM-SAL04DA

購買日期： 年 月 日

顧客	姓名	電話：()
	地址	
經銷商		

- 一. 上列保證書應確實填寫，並蓋有經銷商店章始為有效。
 - 二. 免費服務年限為一年，自購買日起一年內，在正常使用下，如發生故障，則免費維修，但人為或天災地變或蟲害，不在此限。(如需服務換修零件，則按本公司服務規定，收取維修費)。
 - 三. 收費服務年限為兩年，收費服務兩年內，如需維修則按本公司服務規定，收取維修費。
 - 四. 電池、充電電池、天線、唱針、磁頭、雷射頭、耳機、熱感頭、遙控器、信號線、燈泡、隨機附贈之軟體及其他配件、附件...等屬自然耗材不在保證範圍內。
 - 五. 本保證書遺失恕不補發，但如需服務，則依出廠日期，計算保證年度。
 - 六. 本商品無外修服務，如有另行約定則外出檢修費，依本公司規定收取；若發生故障請送回原購買經銷商或親洽本公司所屬營業所。
 - 七. 本商品維修範圍僅於“台、澎、金、馬”(需付擔一趟郵資)，其餘地區請自付來回郵資。
 - 八. MP3、音響...等產品送修時，內存的資料(數位、類比)有可能流失，建議送修前請先行備份，若有資料遺失之情形，本公司將不負任何賠償責任。
 - 九. 本商品使用於營利商業用時，其保證期限按保證書所載期限減半保固。
- 宣告：

本手冊業經仔細檢查及檢對，但仍不排除文字拼寫及技術錯誤之可能，此種錯誤或疏漏將於新版予以修正。本手冊之全部內容，本公司享有隨時修改之權利，且不另行通知

消費者專線：

台北 (02) 8990-4440 新北市五股區五工三路116巷6號
台中 (04) 2473-8199 台中市南屯區東興西街76號
高雄 (07) 350-9091 高雄市三民區金山路108號

委製/進口商

WONDER
旺德電通股份有限公司
地址：新北市五股區五工三路116巷6號
服務專線：(02) 8990-4440
http://wonder.tw
E-mail: service1@wonder.tw

錐磨全自動研磨咖啡機(家庭用)

Fully automatic coffee machine with built in grinder

使用說明書

Instruction Manual



Model: TM-SAL04DA

Read this booklet thoroughly before using and save it for future reference



V1.0
703

目錄

各部件名稱	2
控制面板說明	3
安全注意事項	4
首次使用前	5
設置時鐘	5
設置保溫時間	6
沖洗產品	6
給水箱注水	6
使用咖啡豆	7
研磨程度設置	8
將咖啡壺放到保溫板上	9
開始沖煮	10
使用預磨咖啡	11
保溫取消	11
設置/使用預約計時器	12
沖煮暫停	13
防滴功能	13
清潔和保養	14-18
清潔和保養研磨器/開啓咖啡通道	
拆卸與組裝保護蓋/拆卸上研磨刀	
清潔下研磨器/組裝上研磨刀/爲咖啡機除垢	
故障種類與處理方法/故障診斷	19-20
規格	20


免責聲明

● 聲明：


本手冊業經仔細檢查及校對，但仍不排除文字拼寫及技術錯誤之可能，若因錯誤導致與實機不符時，以實機為準，此種錯誤或疏漏不能當呈堂的依據，其將於新版予以修正。

本手冊之全部內容，本公司享有隨時修改之權力，且不另行通知。

各部件名稱

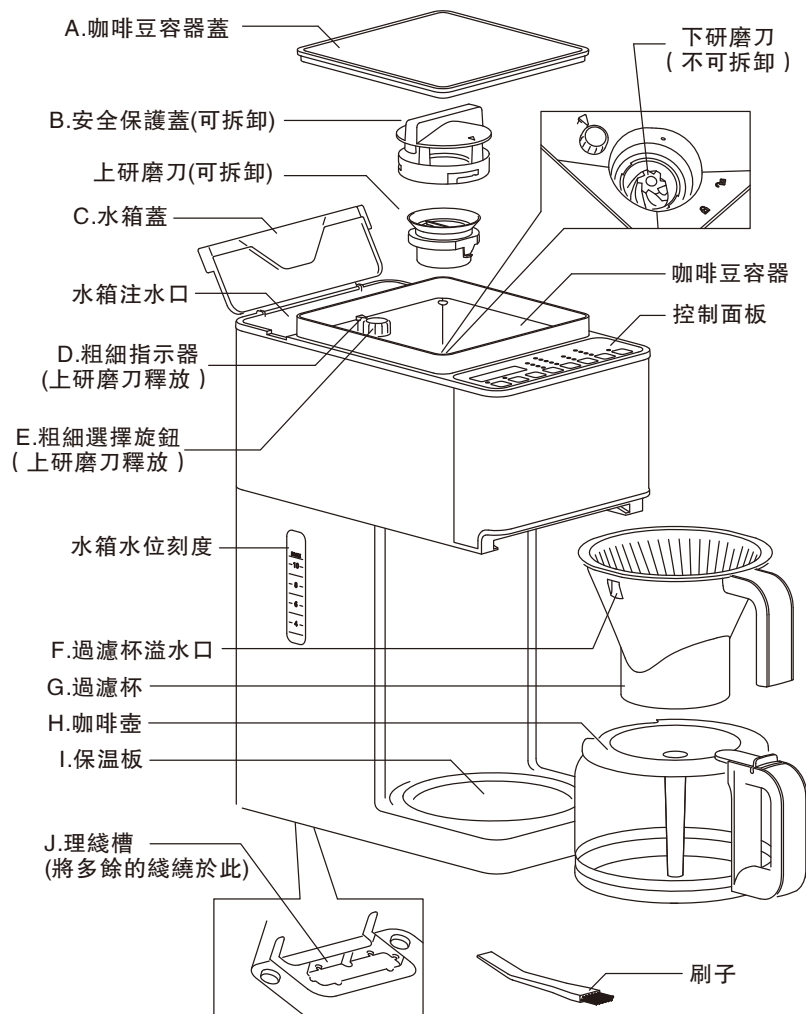

控制面板說明

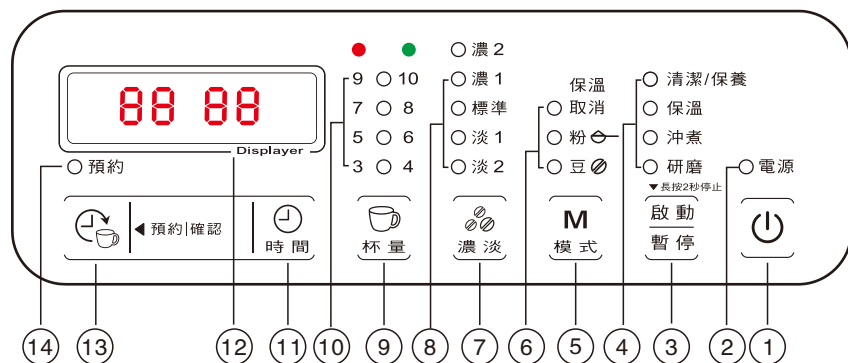

- 1 電源開/關鍵
- 2 開/關機指示燈
- 3 行程啟動/取消按鍵(沖煮暫停/暫停取消鍵)(清潔保養模式鍵)
- 4 行程狀態指示燈
研磨狀態、沖煮狀態(沖煮暫停狀態)、保溫狀態、清潔狀態(保養模式狀態顯示器顯示“OPEN”字樣)。
- 5 模式選擇鍵
- 6 模式狀態指示燈
使用咖啡豆沖煮、使用咖啡粉沖煮、保溫啟動/取消
- 7 咖啡濃淡選擇鍵
- 8 咖啡濃淡狀態指示燈
淡2、淡1、標準、濃1、濃2
- 9 杯量選擇鍵
- 10 杯量狀態指示燈
紅色燈為單杯數3/5/7/9
綠色燈為雙杯數4/6/8/10)
- 11 小時/分鐘調整按鍵(輕觸+1, 長按快速+)
- 12 顯示器
- 13 預約啟動/取消選擇鍵(時間選擇確認鍵)(預約時間設定鍵)(保溫時間設定鍵)
- 14 預約狀態指示燈

安全注意事項

使用本產品之前，請仔細閱讀本使用說明書，並妥善保管以備日後參考。

危險

- 不能將本產品浸入水或其它液體中，更不能在水龍頭下沖洗，否則會使內部電器部件進水，導致機器損壞、發生漏電風險。

注意

- 在將產品接通電源之前，首先確認使用場所使用電壓是否為110V/60Hz電壓。
- 如果電源線損壞，為了避免危險，必須由原廠維修中心的專業人員來進行更換。
- 產品不建議由有肢體、感官或精神能力缺陷或缺少使用經驗和知識的人(包括兒童)使用，除非有負責他們安全的人對他們進行與產品使用有關的監督或指導。
- 不要將電源線懸掛在放置產品的桌子或工作臺的邊緣或讓它接觸有熱源的表面。
- 請勿在本產品工作時觸摸其高溫表面。
- 如果插頭、電源線或產品本身受損，請立即停止使用本產品。
- 請勿將本產品置於高溫表面上，或者緊鄰高溫烤箱、加熱器等熱源。
- 本產品如果出現故障，以及在清潔和保養之前，請拔下產品的電源線插頭。
- 請勿在使用期間移動本產品。
- 產品在使用過程中會發熱，待產品完全冷卻後再做存放動作。
- 在本產品連接到電源時，切勿將手指或其他物體插入咖啡機研磨器。
- 在沖煮咖啡期間或完成後，請不要用手觸摸保溫盤，玻璃壺及過濾杯的高溫部位，請使用手柄，否則會導致燙傷。
- 咖啡豆容器中只可放入烘焙好咖啡豆。嚴禁放入已預磨咖啡粉、即溶咖啡粉、生咖啡豆或任何其它材料放入咖啡豆容器會損壞錐磨機構。
- 不要在微波爐內使用咖啡壺。
- 本咖啡機不用於商業用途，而是作為家庭用電器使用。

首次使用前

注意：

機器出廠前，為確保錐磨機構功能品質，品檢時會使用咖啡豆進行實機出廠測試，因此在機器內有咖啡粉等的痕跡完全正常，保證該機器是新的。


- 將產品放置於穩固平面上
- 將多餘的電線放入理線槽內。

開/關按鍵

- 電源
- #開機狀態（顯示器不顯示/電源指示燈不亮），長按（2秒）電源開/關鍵（顯示器顯示/電源指示燈亮）
 - #開機狀態，長按（2秒）電源開/關鍵（顯示器不顯示/電源指示燈不亮）
 - #開機狀態3分鐘未啟動任何行程自動進入開機狀態
 - #啟動預約設定後，會自動進入待機狀態（顯示器不顯示/電源指示燈亮）

設置時鐘


- 把電源線插頭插入插座接通電源，顯示器00:00閃爍，表示需要設定時鐘當前時間。
- 輕觸 設定小時時間，輕觸 確認，分鐘開始閃爍。
- 輕觸 設定分鐘時間，輕觸 確認，顯示器顯示設定好當前時間。
- 長按 顯示（小時/分鐘）可快速滾動累加。
- 60秒內無按鍵操作，預設當前顯示時間。
- 需要更改當前時間，請拔下插頭重新插電，再重複以上步驟。

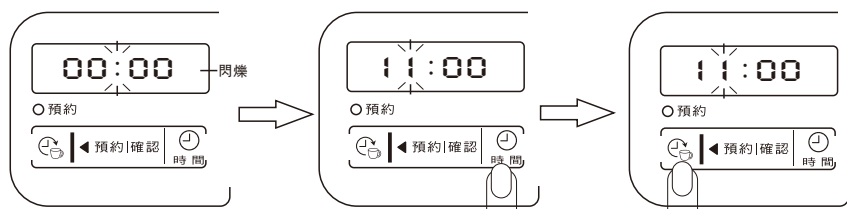

設置保溫時間

保溫時間，即從“沖煮”工作狀態結束開始計時，到“保溫”工作狀態結束時的這段時間。該時間可在30-120分鐘範圍調整（30→40…120→20）；可按下面步驟進行設置。

- 關機狀態（顯示器熄滅，電源指示燈不亮但保持通電狀態）長按4秒 按鍵當顯示器數字顯示當前保溫時間閃爍時；按下圖示步驟調整所需保溫時間。
- 60秒內無按鍵操作，預設當前顯示時間；
- 本產品始終保持上次設定時間。

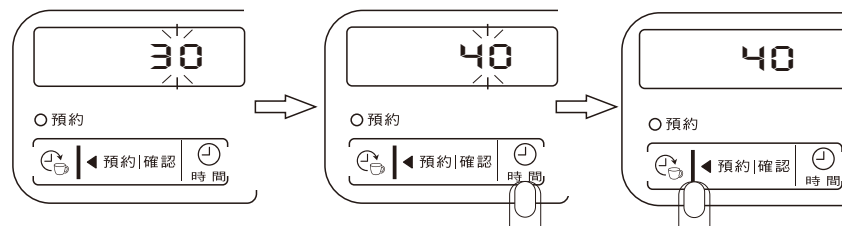

沖洗產品


首次使用之前，為確保衛生，請先沖煮一次咖啡機，水箱注入清水至10 刻度線指示處（禁止加入熱水），切勿將咖啡豆或咖啡粉置入於咖啡豆容器或過濾杯中，按啟動鍵運轉行程讓咖啡通道與水箱等做第一次使用前的清潔。

給水箱注水

本產品側面有3至10杯量（375毫升至1250毫升）水位刻度指示。您可以使用水窗指示來確定水箱中要注入水量；也可以使用玻璃杯的水位指示確定加入水量（禁止加入熱水）。

（注意：玻璃杯為雙刻度表示：水對應為加入水容量/咖啡為沖煮完後刻度）

（注意：水箱的水不管設定幾杯份，每次沖煮會將水箱的水一次性使用完，請搭配杯量設定數注入相對的水量）

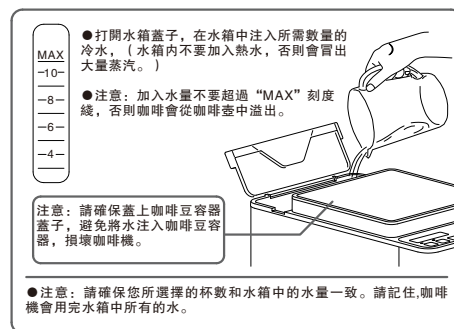


使用咖啡豆

將咖啡豆加入咖啡豆容器

- 取下咖啡豆容器蓋子
- 向咖啡豆容器中加入咖啡豆。請確保咖啡豆容器中所加入的咖啡豆可以滿足您想要的咖啡量。
- 咖啡豆容器的最大容量為150克，為防止因放入過多咖啡豆造成擠壓，影響咖啡豆進入研磨器，請不要超過此容量。

注意：將咖啡豆加入咖啡豆容器時，請確保關閉水箱蓋子。否則咖啡豆落入水箱，會阻塞注水口。

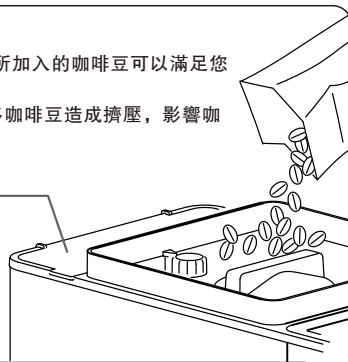

- 請不要使用未烘焙或冷凍的咖啡豆，它們將損壞研磨器。（冷凍的咖啡豆要先解凍，且溫度達到室溫後再使用。）
- 請不要使用經過糖漿或液體調味劑處理的咖啡豆，它們會造成研磨器的堵塞。
- 為保持咖啡的口味，建議您向咖啡豆容器中加入滿足您要求的咖啡豆，多餘咖啡豆存放且密封於原包裝或一個不透光的密封容器裏，放置於陰涼乾燥處。
- 若不連續使用，建議您向咖啡豆容器中加入滿足一次需求的咖啡豆，且讓研磨器一次研磨完所放咖啡豆，這樣可以清空研磨器，保持咖啡的香氣，避免降低咖啡的品質。


關於研磨咖啡

正確的設置咖啡的研磨粗細，會使製作出的咖啡更加香濃。不同研磨粗細的咖啡會帶來咖啡豆中的不同萃取。如果咖啡研磨的太細會導致過分萃取，製造出的咖啡口味偏苦。相反，如果咖啡研磨的較粗，製造出的咖啡口味偏淡。如果咖啡的研磨程度適中，那麼即使加再多的咖啡也不會使咖啡的口味變苦，只會使咖啡的口味變濃。

- 我們建議您從細到粗進行不同研磨程度設置實驗，以找出您喜歡的口味*

研磨程度設置


粗度旋鈕的刻度代表研磨程度設置。共有14種不同的研磨程度設置可供選擇，從位置 1（表示細磨 - 較濃口味）到位置 14（表示粗磨 - 口感較淡）。

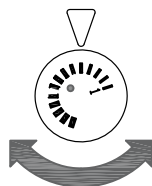

警告

咖啡研磨器中含有可能導致危險的移動部件。在產品接通電源時，請勿將手指或其他物體插入咖啡研磨器內。

- 旋轉“粗度旋鈕”，選擇所需的研磨程度設置。
- 在機器運行過程中，不可以改變研磨程度設置。
- 切勿強行旋轉旋鈕，若無法旋轉旋鈕，讓咖啡機研磨一次，然後再試。

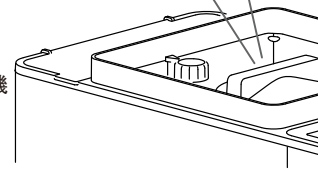


將濾網杯或濾紙裝入過濾杯

- 取出過濾杯，裝入過濾網或過濾紙（1x4型或4號）
- 將過濾杯放到產品中（將過濾杯向內推入到位，會聽見“喀嗒”一聲。）
- 注意：若未正確裝入過濾杯，咖啡機將不工作或可能導致過濾杯防滴閥不能正確開啓。




將咖啡壺放到保溫板上

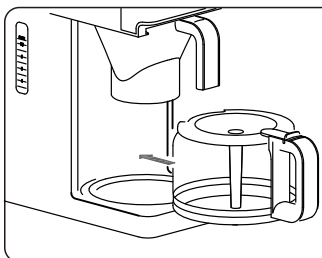

- 將加蓋的咖啡壺放到產品保溫盤上。
- 若未正確將咖啡壺放到保溫盤上，過濾杯防滴閥將不能正確開啓，這樣會導致過濾杯中的咖啡溢出。
- 咖啡壺放到保溫盤上時，杯嘴朝向產品，咖啡溫度會更高

選擇希望的量及口味

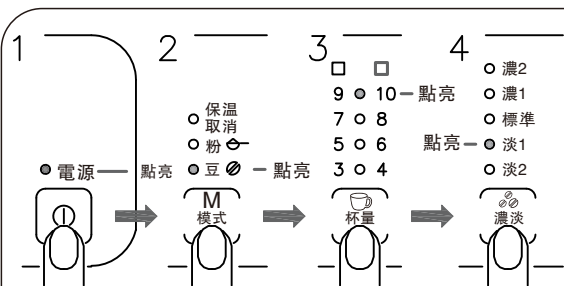

- 長按 (2秒) 按鍵，顯示點亮。
- 輕觸按鍵，選擇“咖啡豆”。
- 輕觸按鍵，選擇杯數。
- 輕觸按鍵，調整咖啡的濃淡。

- 設置咖啡的杯數，咖啡機按選定的杯數研磨相應的咖啡豆。指示燈為紅綠雙色，3/5/7/9對應紅色，4/6/8/10對應綠色。
- 請確保您所選擇的杯數與水箱中的水量一致。請記住，咖啡機會用完水箱中的所有水。
- 調整咖啡豆的研磨量，是相對於標準咖啡豆研磨量相應的增加或減少，以滿足您對咖啡口味的（濃淡）的要求。
標準（1杯對應研磨約6克咖啡豆）
濃1 增加6%；濃2 增加12%；淡1 減少6%；淡2 減少12%



準確的水量和咖啡豆比例，會使咖啡更完美。您可以按下面方法，以得到更好的咖啡。

- 稱取一次所需的咖啡豆，對應設置“濃2”或多一杯的研磨，讓研磨器一次完全研磨完所有的咖啡豆。
- 準確測量水量

開始沖煮

- 長按 (2秒) 按鍵開始衝煮，“研磨”指示燈閃爍，研磨器將研磨所需數量的咖啡豆。




- [] 顯示滾動，開始衝煮。
- [] 顯示閃爍，提示檢查過濾杯
- ☀ 清潔/保養 清潔/保養 “清潔/保養”指示燈點亮時，咖啡機不能開啓，長按按鍵指示燈閃爍提示清洗過濾杯。
- 如果需要停止衝煮 長按 (2秒) 按鍵，“清潔/保養”指示燈點亮。

工作狀態指示

		點亮	熄滅
○ 清潔/保養	○ 清潔/保養	○ 清潔/保養	○ 清潔/保養
○ 保溫	○ 保溫	○ 保溫	○ 保溫
○ 沖煮	☀ 沖煮-閃爍	○ 沖煮	○ 沖煮
☀ 研磨-閃爍	○ 研磨	○ 研磨	○ 研磨
⏸ 啓動 暫停	⏸ 啓動 暫停	⏸ 啓動 暫停	⏸ 啓動 暫停
研磨	沖煮	保溫	提示清潔 完成清潔


- “保溫”指示燈閃爍，保溫開始顯示倒數計時（顯示為設定保溫時間）。
- 取出咖啡壺，將咖啡倒入杯中。
(注意：衝煮完成後，咖啡會從過濾杯中滴出幾秒鐘。)
- 保溫結束，“清潔/保養”指示燈點亮，3分鐘內無操作，顯示關閉（保留“清潔/保養”指示燈）。

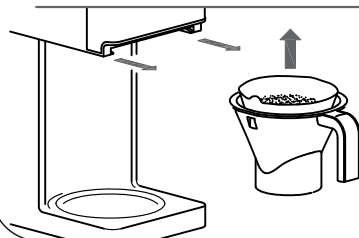

- 清洗過濾杯，取下過濾杯且時間大於4秒，“清潔保養”指示燈熄滅。（每次使用後請及時清洗過濾杯，不要讓濕咖啡渣在過濾杯中過夜。這樣會減少咖啡粉通道的堵塞，以保持咖啡的新鮮和香氣。）

使用預研咖啡

- 打開水箱箱子，在水箱中注入所需數量的冷水。
- 取出過濾杯，裝入過濾網或紙（1x4型或4號），將預磨咖啡放入過濾網或過濾紙中。（您可以根據自己的口味調節咖啡濃度。對於中等濃度的咖啡，每杯（125毫升）使用大約6克咖啡。）
- 將過濾杯放到產品中；將加蓋的咖啡壺放到產品保溫盤上。
- 按住（2秒）按鍵，顯示點亮；輕觸按鍵，選擇“預磨咖啡（粉）”。
- 按住（2秒）按鍵開始沖煮，“沖煮”指示燈閃爍。

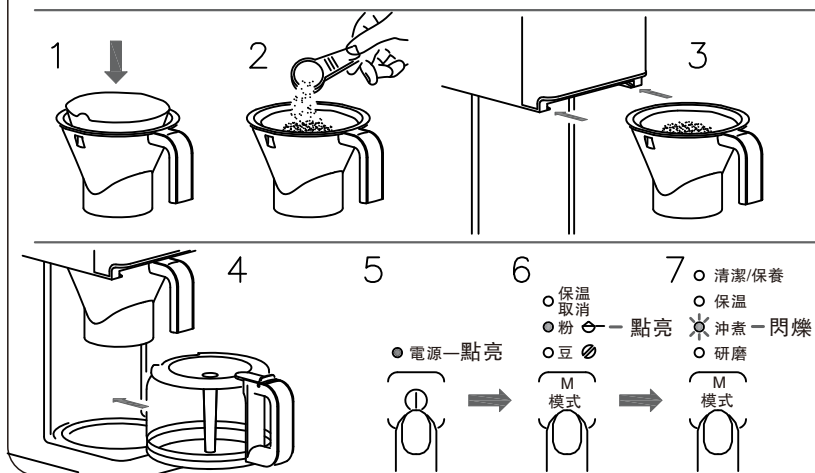

保溫取消

- 保溫 - 點亮
- 取消
- 粉 - 點亮
- 豆 - 點亮



- 保溫
- 取消
- 粉 - 點亮
- 豆 - 點亮




- 輕觸按鍵，選擇“咖啡豆（豆）+保溫取消”；
- 輕觸按鍵，選擇“預磨咖啡（粉）+保溫取消”


設置/使用預約計時器

通過預約計時器可設定自動開始“沖煮”的時間，本產品最長可預約24H；可按下面步驟進行操作。

- “開/關”指示燈點亮，按住（4秒）“預約”按鍵至前次設定的預約時間和“預約”指示燈閃爍，表示可以設置預約定時器時間。
- 輕觸“時間”按鍵，設置小時和分鐘，輕觸“預約”按鍵確認，設置完成，顯示時鐘。

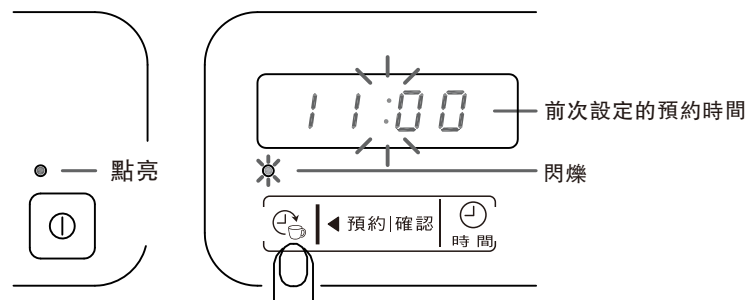

- 輕觸“預約”按鍵開啓預約定時器，“預約”指示燈點亮，顯示預約定時間，沖煮將在預設的時間自動開始。
- 預約定時器關閉，輕觸“預約”按鍵關閉預約定時器，指示燈熄滅。

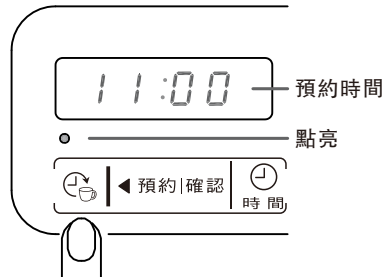

- 預約定時器時間，3分鐘內無操作，顯示關閉（保留“開/關”指示燈和“預約”指示燈。）
- 顯示關閉，輕觸“預約”按鍵，顯示恢復。


沖煮暫停

沖煮暫停功能讓您可以在沖煮過程中暫停沖煮，便於從咖啡機中取出咖啡壺；沖煮暫停功能

○ 清潔/保養	○ 清潔/保養
○ 保溫	○ 保溫
● 沖煮 - 閃爍	● 沖煮 - 點亮
○ 研磨	○ 研磨

● “沖煮”指示燈閃爍時，輕觸按鍵，沖煮暫停，“沖煮”指示燈點亮，顯示停止滾動；再次輕觸，繼續開始沖煮。

● 沖煮暫停，3分鐘內無操作，結束沖煮，“清潔/保養”指示燈點亮。

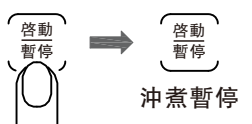


啓動暫停 → 沖煮暫停

防滴功能

防滴功能讓您在沖煮完成前從咖啡機中取出咖啡壺時，阻止咖啡滴到保溫盤上。在沖煮過程結束之前，咖啡將無法釋放其最濃的香味。因此建議您在沖煮過程結束之前，請不要取出咖啡壺並倒出咖啡。

沖煮完成前從咖啡機中取出咖啡壺時，建議您選擇沖煮暫停功能。

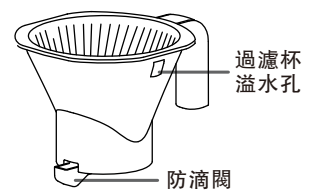

過濾杯溢水孔


防滴閥

- 警告：沖煮咖啡時，請遠離過濾杯溢水孔，因為會有蒸汽冒出。
- 注意：取走咖啡壺時，沖煮不會停止，如在20秒內未將咖啡壺放回產品，咖啡將會溢出。

清潔和保養

每次使用後都必須做清潔

危險：不能將本產品浸入水或其它液體中，更不能在水龍頭下沖洗。

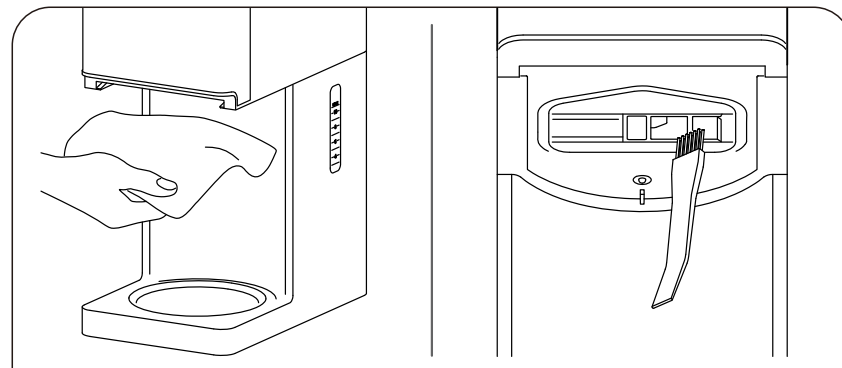

- 關閉咖啡機，將插頭從電源拔下，等各零部件冷卻後進行清潔。
- 用熱水和少許清洗液清潔過濾杯和咖啡壺。
- 用柔軟的擰幹的濕布擦拭咖啡機的外表面。
- 用布或紙巾及配備的刷子清潔圖示部位的咖啡殘渣。

清潔和保養研磨器

由於咖啡豆的油性，每次研磨後，總會存在研磨咖啡豆時遺留的微量粉末，這可能會影響咖啡的口感。所以為了保持咖啡的香氣，避免降低咖啡的品質，建議每週清潔和保養一次咖啡豆研磨器。可按下面步驟進行操作。

（每週1次清潔和保養咖啡豆研磨器，具體取決於使用頻率。當發現咖啡豆研磨量減少或研磨過程中聲音變大時，應及時清潔和保養一次咖啡豆研磨器。）

開啟咖啡粉通道口

- 清空咖啡豆容器，您可以在清潔和保養前使用完咖啡豆容器內的咖啡豆。
- 將過濾杯放到產品中。
- 按圖示開啟咖啡粉通道，咖啡粉通道開啟顯示OPEN，再將插頭從電源插座中拔下。

開啟咖啡粉通道口

○ 清潔/保養 閃爍 — ✖ 清潔/保養
○ 保溫 ○ 保溫
○ 沖煮 ○ 沖煮
○ 研磨 ○ 研磨

○ - 熄滅

○ 預約

◀ 預約 | 確認

時間

● 待機狀態（顯示熄滅，但電源插頭仍插入電源插座），長按（4秒）按鍵至“清潔/保養”

● 指示燈閃爍（咖啡粉通道口開啟中）。

● 咖啡粉通道開啟，顯示“OPEN”；同時研磨機將工作5秒。

拆卸上研磨刀

注意：切勿強行旋轉旋鈕，若無法旋轉旋鈕，讓咖啡機研磨一次，然後再試；若發生咖啡豆將上研磨刀與下研磨刀卡死，無法旋轉旋鈕，注意切勿強行旋轉旋鈕，必須由原廠維修中心的專業人員來進行維修。

● 向下按住粗細度指示器，且順時針方向旋轉粗細度旋鈕，至粗細度指示器對準粗細度旋鈕紅點。

● 向上取出上研磨刀。

拆卸與組裝保護蓋

咖啡粉通道開啟，將插頭從電源插座中拔下，拆卸保護蓋。

拆卸保護蓋

● 逆時針方向旋轉保護蓋至箭頭指向“開鎖”。

● 向上取出保護蓋。

裝入保護蓋

● 箭頭指向“開鎖”裝入保護蓋。

● 順時針方向旋轉保護蓋至箭頭指向“鎖”。

清潔下研磨器


● 研磨器發生堵塞，請用配備的刷子清潔咖啡粉通道。

● 如有必要可以用牙籤或拉直的別針清理咖啡沉澱物；用吸塵器清理咖啡殘渣。

● 如有必要可以用吹風機冷風吹入研磨室乾燥下研磨刀及咖啡粉通道。

組裝上研磨刀

按圖示裝入上研磨刀，旋轉粗細度旋鈕至所需刻度；裝入保護蓋，插入電源線插頭，咖啡機可以使用了。

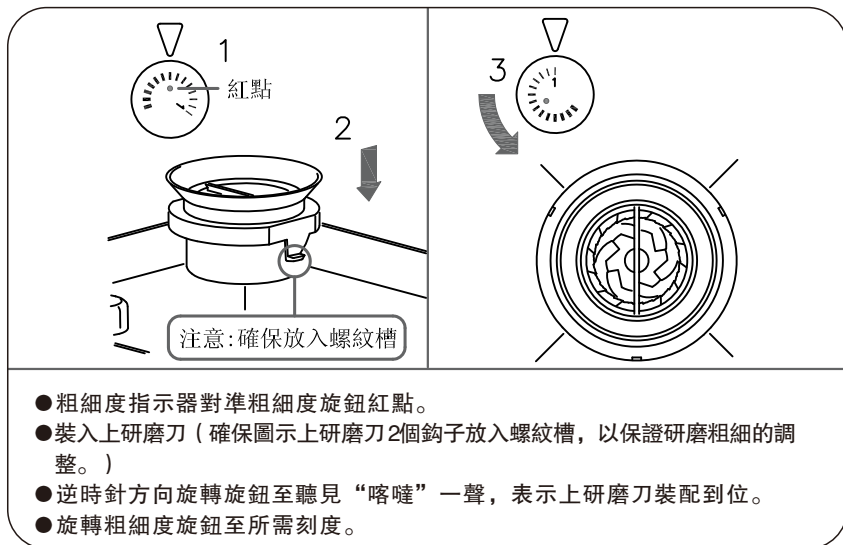


為咖啡機除垢

咖啡機在使用過程中，水中所含的礦物質會附著在咖啡機的水管上，這就是通常所說的“水垢”。當發現咖啡沖煮過程中蒸汽過多或沖煮時間增加時，請為咖啡機除垢。定期去除水垢既可延長產品的使用壽命，又可保證長時間獲得最佳的沖煮效果和穩定的沖煮時間。請按下面方法為咖啡機除垢。


（水垢附著程度因水質而異，礦物質含量多的水質容易附著水垢）

警告：僅使用食用白醋除垢，因為其他產品可能會損壞咖啡機。
（不要使用醋酸度為大於8%的白醋、天然醋、粉狀除垢劑或片狀除垢劑給本產品除垢，否則可能會損壞咖啡機。）



為咖啡機除垢

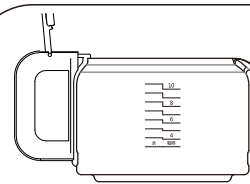

● 將500毫升白醋倒入咖啡壺內（至咖啡壺刻度線“4”處），再倒入125毫升清水（至咖啡壺刻度線“5”處），充分攪拌後倒入咖啡機水箱

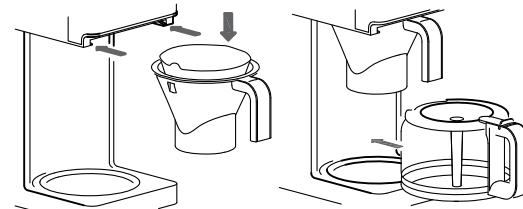






● 取出過濾杯，裝入過濾紙且放到產品中。
● 將咖啡壺放到產品中

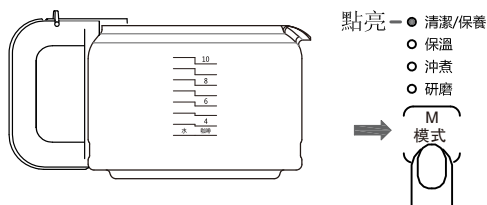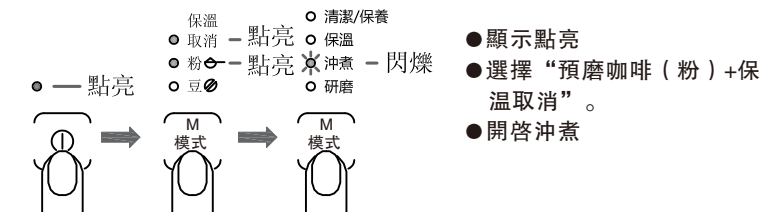

● 待咖啡壺內經過過濾的醋液冷卻後，再將溶液倒入水箱。（注意：這裏的溶液是經過濾紙過濾的。）
● 取出過濾杯至“清潔/保養指示燈熄滅”。
● 啓動沖煮，保持產品運轉直至完成沖煮過程。
● 倒空咖啡壺並丟棄濾紙。
● 用清水重復1~2次，去除白醋味道（此過程無需使用濾紙）。

故障種類與處理方法

    故障提示 (顯示器顯示)

	● 檢查過濾杯是否裝配到位
 	● 參閱“每次使用後都必須做清潔”，清潔咖啡機出粉口位置；拔掉插頭再重新插上插頭。 ● 無法解決問題，必須由原廠維修中心的專業人員來進行維修。
	● 研磨器堵塞或上研磨刀與下研磨刀被咖啡豆卡死 (參閱清潔和保養研磨器)，拔掉插頭再重新插上插頭。 ● 頻繁使用研磨器研磨咖啡豆，致使研磨器馬達過熱保護。(等待馬達冷卻，拔掉插頭再重新插上插頭。)
	● 檢查保護蓋是否裝配到位。正確裝配保護蓋，拔掉插頭再重新插上插頭。

故障診斷

現象	檢查項目及修理方法
咖啡機不工作	<ul style="list-style-type: none"> ● 確保咖啡機上標示的電壓與當地的電源電壓相符。 ● 電源插頭是否完全插入插座。
使用咖啡豆時咖啡太淡	<ul style="list-style-type: none"> ● 咖啡豆容器內存放的咖啡豆不足，要確保足夠的咖啡豆保證您所設置的杯數與濃淡度。 ● 咖啡豆容器放入的咖啡豆過多，造成咖啡豆間因擠壓影響下豆，取出一些豆，攪拌鬆動其餘咖啡豆。 ● 研磨器堵塞。清潔和保養研磨器部分。 ● 確保使用“3—10杯”按鍵所選用的杯數與水箱中的水量一致。請記住，產品會用完水箱中的所有水。 ● 調整咖啡豆研磨量“濃1”或者“濃2”。 ● 使用更濃的混合口味的咖啡豆。


故障診斷

現象	檢查項目及修理方法
使用預磨咖啡時，咖啡太淡	<ul style="list-style-type: none"> ● 確保過濾杯中預磨咖啡的量與水箱中水量一致。請記住，產品會用完水箱中的所有水。 ● 使用更濃的混合口味的預磨咖啡。 ● 要增加咖啡的濃度，請增加預磨咖啡的量或減少水量。
沖煮咖啡期間，咖啡從過濾杯中溢出	<ul style="list-style-type: none"> ● 檢查過濾杯中是否漏放濾紙或永久性過濾網 (注意：只允許放置一張濾紙，濾紙和永久性過濾網不能同時使用。) ● 檢查永久性過濾網是否堵塞。 ● 使用預磨咖啡，確保咖啡是一個符合滴漏式的研磨，過細的研磨會造成堵塞，特別是當使用永久性過濾網時。 ● 檢查是否正確放置咖啡壺，是否漏放咖啡壺蓋，導致防滴閥未開啟。 ● 檢查是否正確裝入過濾杯，導致防滴閥未開啟。 ● 如果您在沖煮過程中將玻璃壺移開20秒以上，則防滴閥會導致過濾杯中咖啡溢出。
沖煮咖啡期間，咖啡從咖啡壺中溢出	<ul style="list-style-type: none"> ● 水箱加水時，注意不要超過“MAX”刻度線。 ● 確保放置的咖啡壺是空的。
咖啡不夠熱	<ul style="list-style-type: none"> ● 檢查是否選擇保溫取消功能。 ● 為咖啡機除垢，請參閱“為咖啡機除垢”部分。
沖煮過程中蒸汽增加，且需要更多時間來沖煮咖啡	<ul style="list-style-type: none"> ● 為咖啡機除垢，請參閱“為咖啡機除垢”部分。
咖啡豆研磨量減少或研磨過程中聲音變大	<ul style="list-style-type: none"> ● 咖啡機堵塞，請參閱“清潔和保養研磨器”部分。
咖啡研磨過粗	<ul style="list-style-type: none"> ● 上研磨刀未正確裝配，請參閱“裝入上研磨刀”部分。

規格


電源	110VAC 60Hz
重量	約3.7kg
功率	730W
外形尺寸 (約cm)	長32 寬16.8 高39.2
研磨功率	80W
沖煮功率	730W

CONTENT

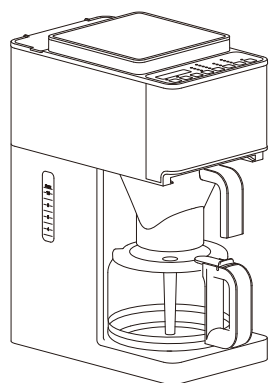


Comonet	2
Control panel	3
Caution	4
Before first use	5
Time setting	5
Setting the holding time	6
Cleaning	6
Filling the water container	6
Using coffee beans	7
Grind selection	8
Put the filter into the filter basket	9
Start brewing	10
Using pre-ground coffee	11
Cancel keep warm function	11
Setting program timer	12
Stop brewing	13
Drip-stop function	13
Cleaning and maintenance	14-18
Cleaning and maintenace grinder/Open the coffee shute	
Remove and assemble the protective lid/Remove upper burr	
Cleaning lower burr/Assemble upper burr/Descaling the coffee maker	
Troubleshooting	19-20
Specification	21

COMPONENT

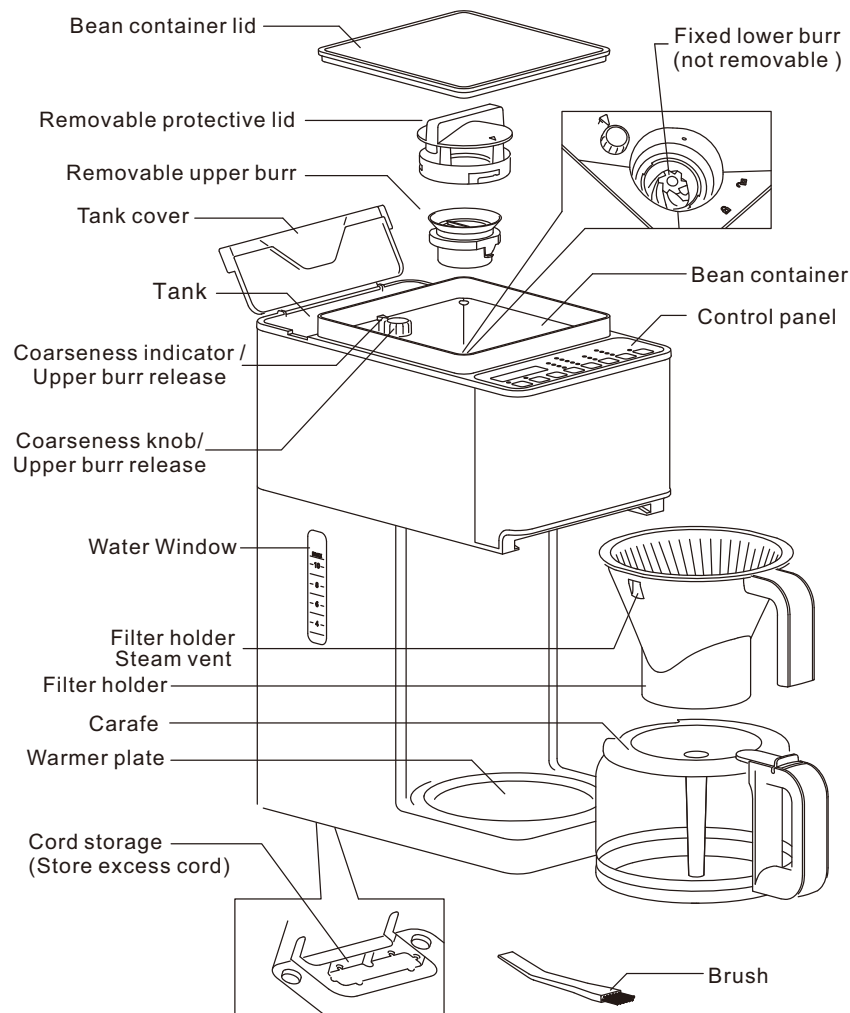

CONTROL PANEL

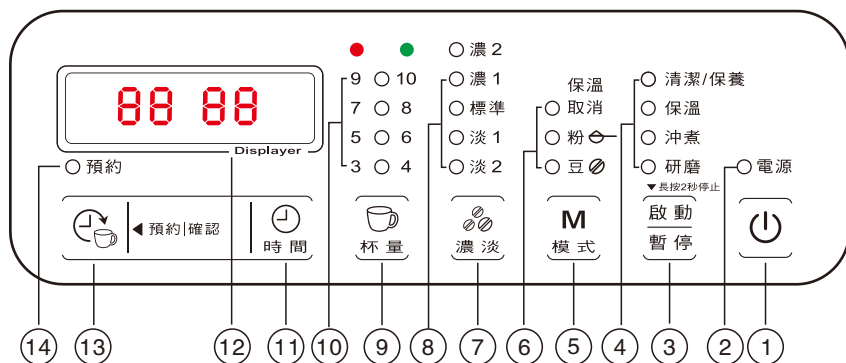

- ① On/Off button
- ② On/Off LED Indicator
- ③ Start/Cancel button(Stop brewing/Cancel stop button)(Clean button)
- ④ Operation status LED indicator
Grind、Brew、Brew stop、Clean(Under clean mode,the displayer will display"OPEN".)
- ⑤ Function button
- ⑥ Function LED indicator
Use coffee bean and ground coffee to brew、Start/Cancel keep warm
- ⑦ Strength Control Button
- ⑧ Strength Control LED indicator
Light 2、Light 1、Standard、Strong 1、Strong 2
- ⑨ Cups button
- ⑩ Coffee Cups LED indicator
3/5/7/9 Corresponding with red light
4/6/8/10 Corresponding with green light
- ⑪ Hour/Minute Button(Light-press+1,long-press speedy+)
- ⑫ Displayer
- ⑬ Program time start/cancel button(time confirm button)(set program time button)(set keep warm button)
- ⑭ Program time button LED indicator

CAUTION

Read this manual thoroughly before using the product and keep it properly for future reference.

DANGER

- Do not immerse this machine in water or other liquid, and do not rinse it under the tap, otherwise the water will seep into the electrical components inside.

WARNING

- Check if the voltage indicated on the bottom of the appliance corresponds to the local mains voltage before you connect the appliance to the power supply.
- If the power cord is damaged, it must be replaced by an authorized service center or similarly qualified persons in order to avoid hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are under supervision or have been given instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep the power cord out of the reach of children. Do not let the power cord hang over the edge of the table or workbench on which the appliance is placed.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not touch the hot surfaces of the appliance when it is in operation.
- Do not use the appliance if the plug, the power cord or the appliance itself is damaged.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- If the machine broken, unplug the power cord from power outlet before cleaning it.
- Do not move the machine when it is in operation.
- Wait until the appliance has cooled down before you keep it away.
- When the product is connected to the power supply, do not insert fingers or other objects into the coffee grinder.
- The jug and hopper is hot during and after brewing. Always hold the jug by its handle.
- The bean container can only hold coffee beans. Ground coffee, instant ground coffee, raw coffee beans or any other materials put into the bean container may damage the coffee machine.
- Do not put the Carafe in the microwave oven.
- This coffee machine is not used for commercial purposes, but as a household appliance. It can also be used in the office.

BEFORE FIRST USE

Note:

The coffee maker has undergone factory tests using coffee beans. It is thus normal to have some ground coffee left in the machine. However, we guarantee that the machine is new.

- Place the machine on a flat surface.
- Put the excess cord into cord storage.

on/off button


○電源



- # Standby Mode (light off). Press (2s) "On/off" until the indicator light is on.
- # With the indicator light on, press (2s) and hold "On/off" to enter the standby mode (indicator light off).
- # With the indicator light on, the coffee machine will enter the standby mode if it is not activate in 3 minutes.
- # Start program time setting, the coffee machine will enter the standby mode. (Displayer light off. On/off button light on)

TIME SETTING


- Plug into the power outlet. When 00:00 flashes, it means that the time needs to be set.
- Light-press to set the hour and light-press to confirm.
- Light-press to set the minute and light-press to confirm. The time will be shown.
- Long-press it will show "hour/minute" faster moving.
- Within 60s without any instruction will turn back into present setting.
- Change the time setting, unplug from outlet, repeat the above steps.

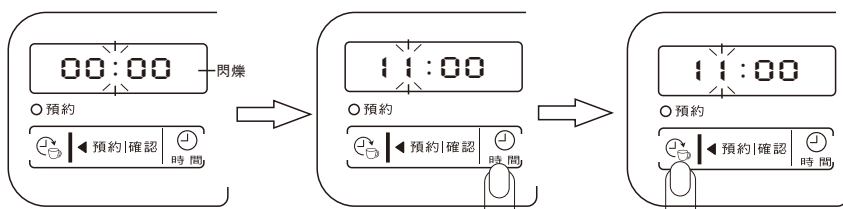

SETTING THE HOLDING TIME

The holding time refers to the period starting from the end of the "Brew" operation to the end of the "holding time" operation. The holding time can be adjusted from 30-120 minutes. (30→40...120→20) ; Follow the instructions below to adjust the settings.

- Standby Mode (light off but the plug is still inserted in the socket). Press (4s) until the set holding time flashes; then follow below steps to set desired holding time.
- Within 60s without any instruction, keep present display time.
- This machine will always store the previous setting.

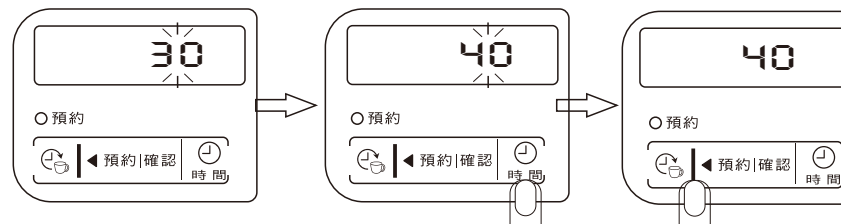

CLEANING


The machine needs to be rinsed before using it for the first time. Fill the water container with clear water to where the level is marked 10 (do not fill in hot water) ; do not put coffee beans and ground coffee into the filter cup. Start brewing, let water go through the coffee shute and tank.

FILLING THE WATER CONTAINER

There are indications for volumes of 3 to 10 cups (375ml to 1250ml) on the water level window and on the jug. You can use these indications to determine how much water to put into the water reservoir. (Do not fill in hot water)

(Note: The jug has double indications: 水 corresponding with the amount of water/咖啡 corresponding with the amount of brewed coffee.)

(Note: Please remember that the coffee machine will use up all the water in the container.)

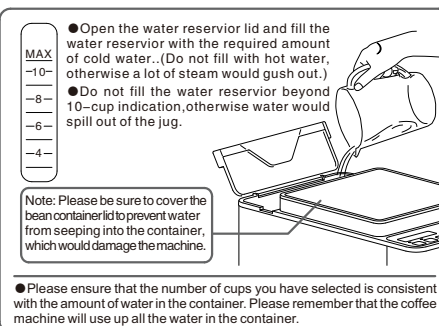


Using coffee beans

Add the coffee beans into the container

- Remove the coffee bean container lid.
- Fill the container with coffee beans. Make sure there are enough coffee beans in the container for the amount of coffee you want to brew.
- The maximum capacity of the bean container is 150g. To prevent the grinder from jamming, please do not exceed this amount.

Note: Always keep the water reservoir lid closed when you fill the coffee bean container with coffee beans. Otherwise, the coffee beans can fall into the water reservoir and choke the water inlet.

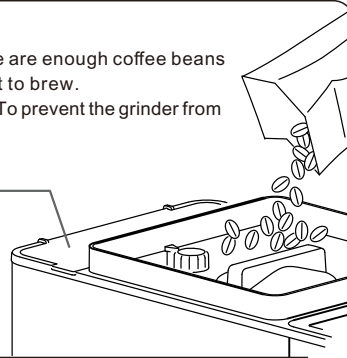

- To prevent the grinder from being jammed, do not use unroasted or frozen beans. Frozen beans need to be thawed until their temperature is the same as that of the room.
- To prevent the grinder from jamming, do not use caramelised beans.
- In order to retain the flavours, we advise that you add the coffee beans that meet your requirements. Excess coffee beans can be sealed and stored in the original packaging or an opaque, sealed container and kept in a cool, dry place.
- We suggest that you add the amount of coffee beans sufficient for one-time brewing if you do not intend to use the machine continuously and let the machine finish grinding all the beans. You can then empty the grinder this way and retain the coffee's aroma and avoid lowering the coffee's quality.


About grinding coffee

Correct fineness or coarseness setting will create a cup of coffee with a heady aroma. Different grind selection will give out different flavors. Fine grind will result in strong, bitter coffee. Conversely, coarse grind will result in weaker coffee. If moderate grind is chosen, the coffee only would taste strong instead of bitter no matter how much coffee you add.

*We advise you to experiment with different grind settings from (from fine to coarse) to find out which setting you prefer.

Grind selection


The scale on the knob indicates the grind selection. It has 14 selections for you to choose from, from 1 (fine-strong/bitter flavour) to 14 (coarse-light flavour).

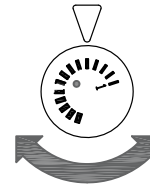

Warn


The grinder may have dangerous moving parts. During operation, do not put finger or other items inside grinder.

1. Turn the knob to choose the desired selection.
2. Do not change the grind selection when the grinder is in operation.
3. Do not turn the knob forcibly if it cannot be turned. Please let the machine grind one more time and then try again.

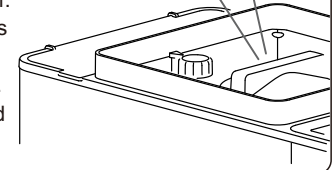


Put the filter into the filter basket

1. Remove the filter basket and place the filter inside (Type 1x4).
2. Insert the filter basket. A "click" will be heard if it is inserted correctly.
3. Note: If the filter basket is not inserted correctly, it will cause the machine not to work or the drip-stop function to fail.

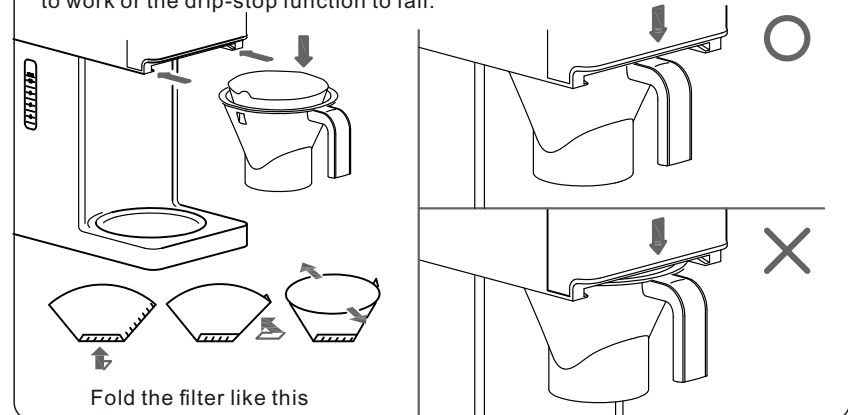


Put the jug onto the warmer

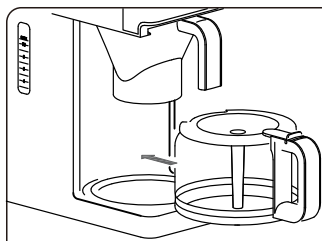

- Put the jug with lid onto the warmer plate.
- If the jug is not put correctly, the drip-stop function will not work, which would cause the basket to overflow.
- Put the jug onto the machine and its mouth towards the machine. The coffee temperature will be higher this way.

Chose desired amount and flavour

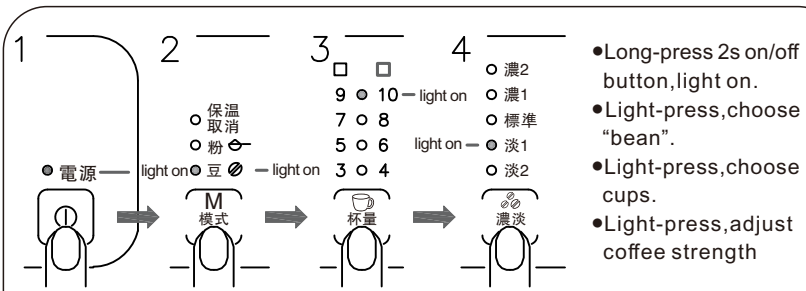

- Long-press 2s on/off button, light on.
- Light-press, choose "bean".
- Light-press, choose cups.
- Light-press, adjust coffee strength

- Set the number of cups, and the machine will grind the amount of beans that correspond to the selected number of cups. The indicator lights come in red and green. 3/5/7/9 correspond to red and 2/4/6/8 correspond to green.
- Please ensure that the number of cups you have selected is consistent with the amount of water in the container. Please remember that the coffee machine will use up all the water in the container.
- Adjust the amount of grinding of the beans, i.e. the increase or decrease that correspond to the standard amount of beans to meet your requirements for the coffee flavour (strong or light).



The accurate ratio of water amount to coffee beans would make for better coffee. You can make better coffee by following the method below.

- Weigh the amount of beans enough for a one-time brew and set "+2" or one more cup of grinding correspondingly to let the grinder finish grinding all the beans at once.
- Measure the correct amount of water.

Start brewing

- Press 2s to start grinding. When the "Grind" indicator light is on, the machine will grind the desired amount of coffee beans.




- [] Display runs and brewing starts.
- [] Please check the filter basket if this signal is displayed.
- ✱ 清潔/保養 When the "Clean" light is on, the machine cannot be started. Press and hold the key until the indicator light flashes to prompt you to wash the filter cup.
- If you need to stop the brewing, press the key for 2s until the "Clean/Maintenance" light is on.

工作狀態指示

			Light on	Light off
○ 清潔/保養	○ 清潔/保養	○ 清潔/保養	○ 清潔/保養	○ 清潔/保養
○ 保溫	○ 保溫	✱ 保溫-Flash	○ 保溫	○ 保溫
○ 衝煮	✱ 衝煮-Flash	○ 衝煮	○ 衝煮	○ 衝煮
✱ 研磨-Flash	○ 研磨	○ 研磨	○ 研磨	○ 研磨
啓動 暫停	啓動 暫停	啓動 暫停	啓動 暫停	啓動 暫停
Grinding	Brewing	Keep warm	Remind to clean	Finish clean


- When the "Keep Warm" indicator light flashes, the timer for keeping warm will start and the time will be displayed.
- Take the jug out and pour the coffee into a cup.
(Note: When the brewing is done, a few drops of coffee would drip from the filter cup for a few seconds.)
- At the end of the keeping warm, the "Clean/Maintenance" light comes on. The display will go off if there is no operation within 3 seconds (the "Clean/Maintenance" light remains on).

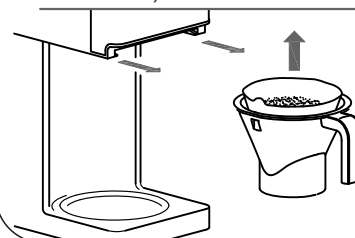

- Washing the filter cup Take the filter cup out for more than 4s until the "Clean/Maintenance" light goes off. (Please wash the filter cup promptly after use each time. Do not leave wet coffee residue in the cup overnight. This would reduce the blockage of the coffee powder chute to retain the coffee's freshness and aroma.)

Using "pre-ground" coffee

- Open the water reservoir lid and fill the water reservoir with the required amount of cold water.
- Remove the filter cup and place a piece of filter paper (Type 1x4 or 4) and add the pre-ground coffee into the filter. (You can adjust the strength of the coffee according to taste. For medium-strength coffee, use about 6g of coffee for each cup (125ml).)
- Place the filter cup into the product; place the jug with the lid on onto the product's warmer plate.
- Press and hold (2s) the key until the indicator light is on. Light-press the key to select "Pre-ground-coffee (powder)".
- Press and hold (2s) the key to start brewing. The "Brewing" indicator light will flash.

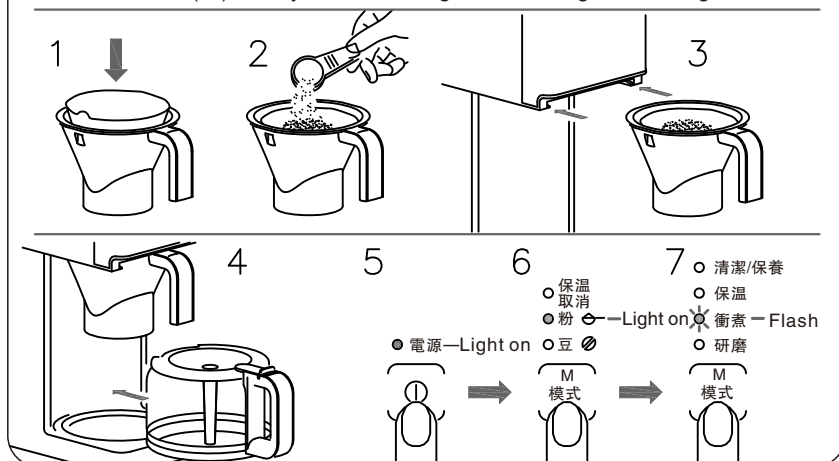

Cancel keep-warm function

- 保温取消 — Light on
- 粉 — Light on
- 豆 — Light on



- 保温取消 — Light on
- 粉 — Light on
- 豆 — Light on




- Light-press and select "Bean" + "Cancel keep-warm"
- Light-press and select "Pre-ground coffee" + "Cancel keep-warm"


Setting program timer

The time for the automatic start of the brewing can be set via the program timer. The product can set the longest time 24H. You can follow the steps below.

- The "On/off" indicator light comes on. Press and hold (4s) the "Program time" key till the previously set program time and the "Program time" indicator light flash to indicate that the program timing can be set.
- Light-press the "H/min" key to set the hour and minutes. Light-press the "Program time" key to confirm and complete setting and display the timer.

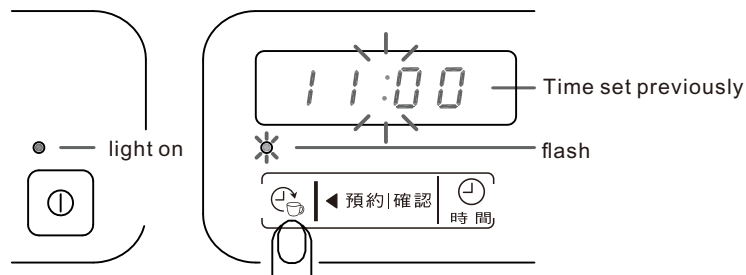

- Light-press the "Program time" key to start Program Timer. The "Program time" indicator light comes on and displays the programmed time. Brewing will start automatically at the pre-set time.
- The program time starts. Light-press the "Program time" key to turn the program timer off, and the indicator light will go off.

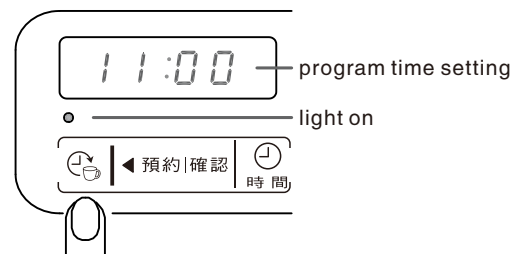


- The program timer starts. The display will turn off if there is no operation within 3 minutes (the "On/off" and "Program time" indicator lights remain on).
- The display is turned off. Light-press the "Program time" key to resume the display.

Stop brewing

The “stop brewing” function allows you to remove the jug during the brewing process. This function allows you to simulate “brewing coffee by hand” to enjoy the process of making coffee.


○ 清潔/保養	○ 清潔/保養	<ul style="list-style-type: none">● When the “Brewing indicator light flashes, light-press the key to pause the brewing. When the “Brewing indicator light is on, the display will stop rolling. Light-press again to restart the brewing.● Brewing pauses. The brewing stops if there is no operation within 3 minutes. The “Clean/Maintenance” indicator light comes on.
○ 保溫	○ 保溫	
⊗ 衝煮 — Flash	● 衝煮 — Light on	
○ 研磨	○ 研磨	

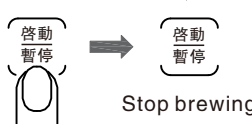	Stop brewing
--	--------------

Drip-stop function

The drip-stop function enables you to remove the jug from the coffee-maker before the brewing process is completed. When you remove the jug, the drip-stop stops the flow of coffee into the jug. The coffee will not be able to release its strongest aroma before the brewing is completed. Therefore, we do not advise removing the jug and pouring the coffee before brewing process is done.

You are advised to select the “Stop brewing” function if you want to remove the jug in the middle of brewing.

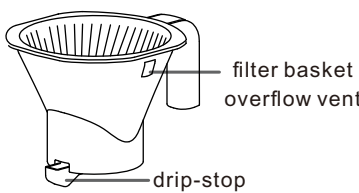


filter basket
overflow vent
drip-stop

- Warning: Please keep away from the filter basket's overflow vent during brewing as steam would gush out.
- Note: The brewing does not stop when the jug is removed. If the jug is not placed back onto the product within 20 seconds, the coffee will overflow.

Cleaning

Cleaning after each use

Warning: Do not immerse the appliance in water or any other liquid nor rinse it under the tap.

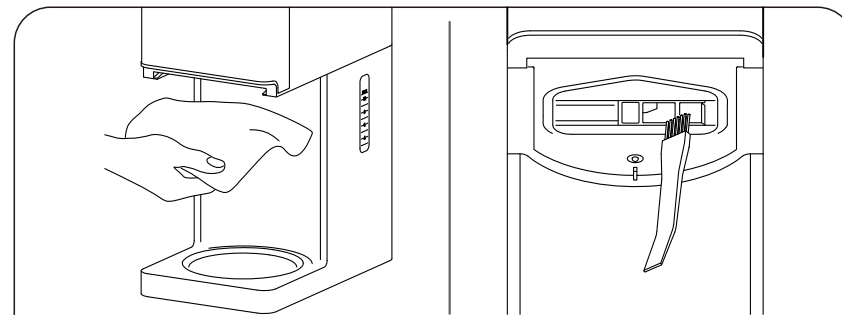

- Turn the machine off and unplug the power cord from the power socket. Carry out the cleaning after all the parts have cooled down.
- Clean the filter cup and the jug in a dishwasher or with water and a little detergent.
- Use a soft and damp cloth wringed dry to wipe the outer surface of the machine.
- Use cloth or tissue paper and the brush provided to clear out the coffee residue in the locations indicated in the diagram.

Cleaning and maintenance grinder

Due to the coffee beans' oiliness, there will always be minute coffee residue left after each grinding. This may affect the taste of the coffee. Therefore, in order to retain the aroma and avoid lowering the quality of the coffee, we advise you to clean coffee grinder once a week. Please follow the steps below.

(Clean the coffee bean chute every 1 to 2 weeks, depending on the frequency of use. When the amount of ground coffee decreases or the grinding noise gets louder, the grinder should be cleaned promptly.)

Open the coffee chute

- Empty the coffee bean container (grind all the coffee beans that are left in the coffee bean container before carrying out maintenance.)
- Place the filter basket back into appliance.
- Follow the diagram to open the coffee powder chute. Unplug the power cord from the power socket after opening it.

Open the coffee chute

○ 清潔/保養 flash — ✖ 清潔/保養
○ 保溫 ○ 保溫
○ 沖煮 ○ 沖煮
○ 研磨 ○ 研磨

○ - light off ○ 預約
啓動暫停 ① 預約|確認 時間

- Standby mode (display off but the power cord remains plugged into the power socket). Press and hold (4s) the key until the “Clean/Maintenance” indicator light flashes (the coffee powder chute is opening).
- The coffee powder chute opens and “Open” is displayed; the grinder will operate for 5 seconds.

Remove upper burr

Warning: Do not turn the knob forcibly, If the knob cannot be turned, let the coffee machine grind one more time and then try again. If there are solid substances blocking the upper and lower burrs and the knob cannot be turned, do not turn the knob forcibly, Repair must be done by an authorized service center or authorized service personal only.

- Push the coarseness indicator down and turn the knob clockwise until it aligns with the red point.
- Remove the upper burr.

Remove and assemble the protective lid

After coffee powder chute is opened, unplug the power cord from the power socket and remove the protective lid.

Remove the protective lid

- Turn the protective lid counter-clockwise until the arrow points to the “Unlock” sign.
- Remove the protective lid upwards.

Assemble the protective lid


- Point the arrow to the “Unlock” sign.
- Turn the protective lid counter-clockwise until the arrow points to the “Unlock” sign.

Cleaning grinder

- Grinder is choked. Please use the brush to clean the coffee bean chute.
- Use a toothpick or straight paperclip to clean the coffee residue if necessary, and then clean the residue using a vacuum cleaner.
- Use a hair-dryer to blow the grinder and coffee bean chute dry if necessary.

Assemble upper burr

Follow the diagram to assemble the upper burr. Turn the grind selection knob to the desired scale and put on protective lid. Plug the power cord in and you can start using the machine.

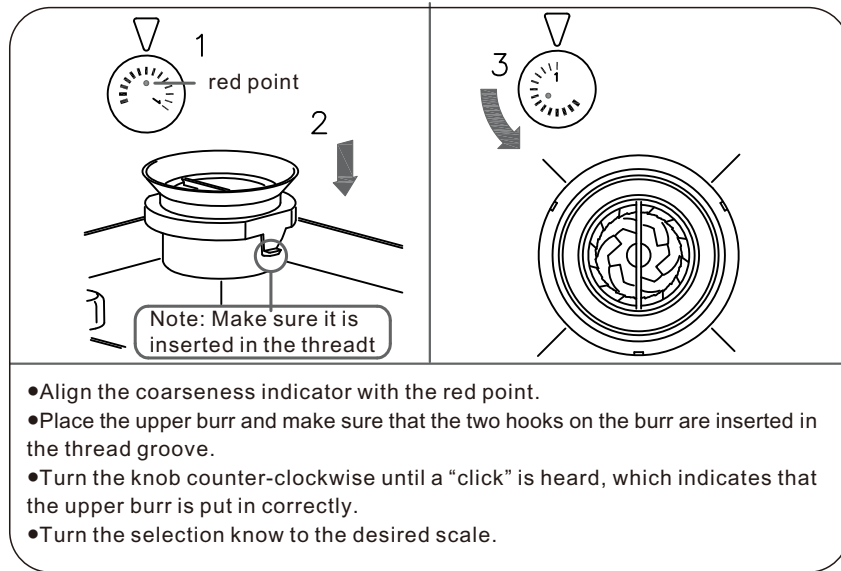


Descaling the coffeemaker






In the process of using the coffee machine, the minerals in the water would adhere to the machine's water pipe. This is what is generally known as 'scale'. When too much steam or an increase in boiling time is observed, please carry out descaling for the machine. Regular descaling can prolong the usage life of the machine and also ensure that you achieve the best brewing results and stable brewing time for a long time. Please carry out the descaling by following the steps below.

Warning: Use only white vinegar as other products may damage the machine. (Do not use vinegar, natural vinegar, detergent powder or sheet detergent with acetic acid above 8% to descale, Otherwise, the coffee-maker will be damaged.)

Descaling the coffeemaker

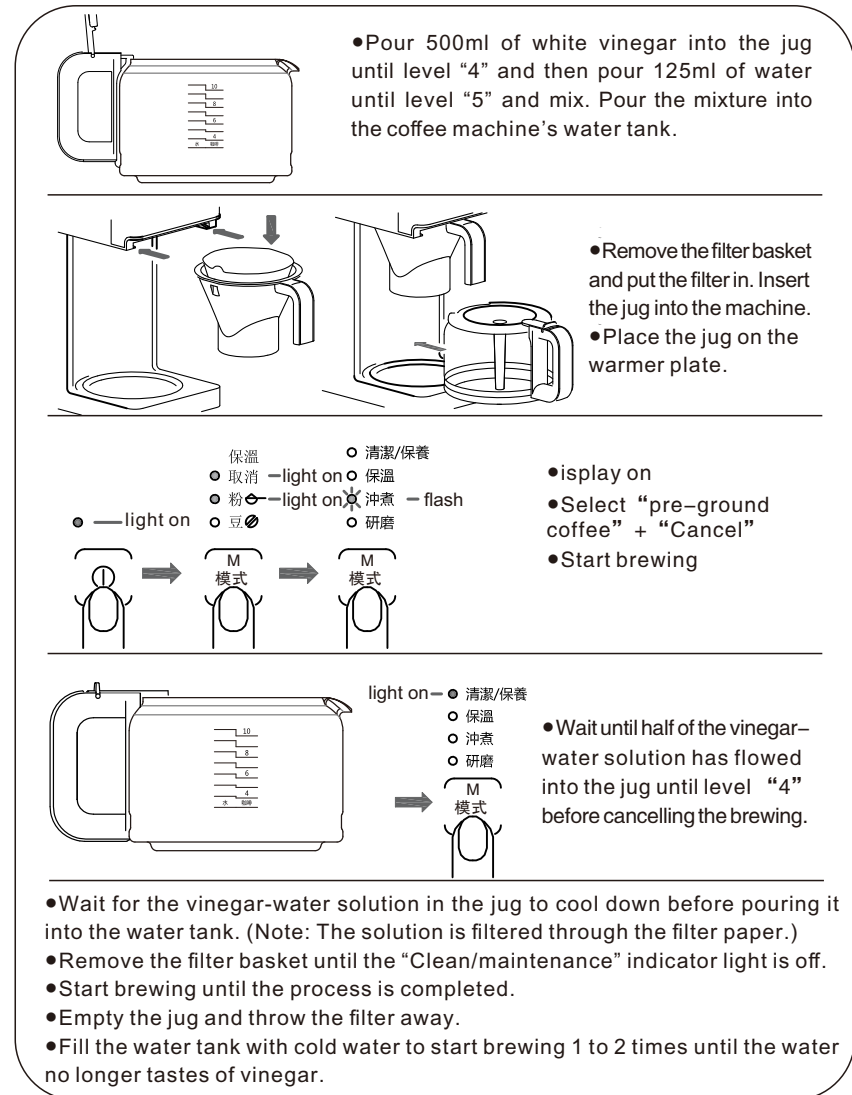

Troubleshooting

     	<ul style="list-style-type: none"> •Check to see if the filter basket is inserted or inserted correctly.
	<ul style="list-style-type: none"> •Refer to “Cleaning after each use” to clean the coffee bean chute and plug the power cord into the power socket again.
	<ul style="list-style-type: none"> •Please return the machine to an authorized service centre or similarly qualified personnel for checking or repair.
	<ul style="list-style-type: none"> •The choked grinder has solid substances lodged between the upper and lower burrs (refer to Cleaning and Maintenance of the Grinder). Plug the power cord in. •Frequent use of the grinding function has caused the overheating protection of the motor to activate. (Wait for the motor to cool down before plugging the power cord in again.)
	<ul style="list-style-type: none"> •Check to see if the protective lid is assembled correctly. If so, please plug the power cord in again.

Troubleshooting

Occurrence	Troubleshooting
The appliance does not work	<ul style="list-style-type: none"> •Make sure that the voltage indicated on the appliance corresponds to the local mains voltage. •Is the power cord plugged completely into the power socket?
When I use the grinder, the coffee is too weak.	<ul style="list-style-type: none"> •Insufficient coffee beans. Please put enough coffee beans that corresponds to your settings. •Excessive coffee beans would cause the beans not to be able to fall through. Remove some beans and stir the remaining beans. •The grinder is choked up. Please refer to 6.2 Cleaning and Maintenance of the grinder. •Make sure that the number of cups you select with the 2–10 ups button is consistent with the amount of water in the water reservoir. Please keep in mind that the machine uses up all the water in the reservoir. •Adjust the coffee amount until “+1” or “+2” . •Use coffee beans with strong flavours.

Troubleshooting

Occurrence	Troubleshooting
When I use pre-ground coffee, the coffee is too weak.	<ul style="list-style-type: none"> •Make sure that the amount of pre-ground coffee in the filter is consistent with the amount of water in the reservoir. Please keep in mind that the machine uses up all the water in the reservoir.. •Use ground coffee of a stronger blend or flavour. To increase the coffee strength, increase the amount of pre-ground coffee or reduce the amount of water.
The filter overflows from the filter basket while coffee is brewing.	<ul style="list-style-type: none"> •Check if the filter paper or the permanent filter has been placed in. (Note: Put only one filter paper. The filter paper or the permanent filter cannot be used at the same time.) •Check if the permanent filter is choked up. •Use pre-ground coffee that is suitable for drip-stop grinding. Too much fine grinding will cause a choke especially when using the permanent filter. •Check if the jug is placed correctly. Did you forget to place the lid, which would cause the drip-stop function not to work? •Check if the filter basket is placed correctly. Did you forget to place the lid, which would cause the drip-stop function not to work? •If the jug is removed for more than 20 seconds during brewing, the drip-stop valve would cause coffee to overflow from the filter cup.
The filter overflows from the jug while coffee is brewing.	<ul style="list-style-type: none"> •Please do not fill the water beyond the “Max” level. •Please make sure that the jug you place is empty.

Troubleshooting

Occurrence	Troubleshooting
The coffee is not hot	<ul style="list-style-type: none"> •Check if the “Cancel Keep-warm” function is selected. •Descale the machine. See Descaling the Coffee-maker.
Too much steam and brewing time become longer during brewing process	<ul style="list-style-type: none"> •Descale the appliance. See Descaling the Coffee-maker.
The grinding amount is reduced and the grinding noise has become louder.	<ul style="list-style-type: none"> •The grinder is choked up. See Cleaning and Maintenance of the Grinder.
Grinding too coarse	<ul style="list-style-type: none"> •The upper burr assembly is not correct. See the section “Assembling the Upper Burr” .

Voltage

Voltage	110V 60Hz
Weight	About 3.7kg
Power	730W
Product size	L32xW16.8XH39.2
Grinding power	80W
Brewing power	730W